



**TYPE
APPROVED**

OPERATIONAL INSTRUCTION

XL SYSTEM



TIPLIFT

LORRY LOADER & GENERAL HYDRAULIC SALES & SERVICE

www.tiplift.co.uk

INSTRUCTIONS

1. Engage PTO with engine running.
2. Green light on the dash will illuminate to indicate that the crane is stowed and stabilizers are not deployed.
3. Switch crane on (fig. 1).
4. Turn the lever to operate legs and press the stabilizer button for about two seconds (until stabilizer alignment display is shown) (fig. 2).
5. Extend stabilizers on working side until three bars are showing (fig. 3), If the display shows 2 or 1 bars, reduced capacity is automatically calculated (fig. 6).
6. Lower all stabilizers until arrows are pointing down (fig. 4).
7. Turn the lever from crane stabilizers to crane op.
8. Press stabilizer button until the display shows recovery crane / manual.
9. Operate Jib / second boom lever to fully folded position.
10. Crane can now be used.
11. If extra functions are needed press tools i.e. camshell bucket (fig. 5)
12. Fold crane away and switch back to stabilizers.
13. Press stabilizer button, lift and retract stabilizers
14. Turn lever from crane function to stabilizers.
15. Switch off crane.
16. If the red light is on, check that all stabilizers are retracted and fully stowed.
17. If they are not, press stabilizer button and stow correctly.

APPENDIX

